BMW Carsoft 6.5 Software Installation Instruction

Thanks for purchasing the BMW Carsoft 6.5 Car diagnostic device. Since the BMW Carsoft 6.5 software is cracked, so you need to carefully follow below software installation instruction for making sure the BMW Carsoft working properly.

BMW Carsoft 6. 5 Software Installation procedure:

Step 1: Copy the whole BMW Carsoft 6.5 File folder from the software driver CD to your hard-disk driver D or other hard driver. It is more stable and reliable to install the BMW Carsoft software from hard-disk directly.

Step 2: In the hard-disk driver where you pasted the whole BMW Carsoft 6.5 software, please open the File folder of BMW Carsoft 6.5, then double click "SETUP CAR SOFT.exe" to run the BMW Carsoft software installation part 1.



Step 3: The BMW Carsoft software installation proceeds automatically, click "Next" button for software installation when you see the BMW Carsoft 6.5 Welcome surface.



Step 4: The BMW Carsoft software installation asking about Software License Agreement, click "Yes" button to proceed the BMW Carsoft software installation.



www.szhtech.com

Step 5: The BMW Carsoft software installation asking about directory in your hard-disk, you can change the directory or keep the default directory "C:\Program Files\CARSOFT\BMW as it is, then click "Next" button to proceed the BMW Carsoft 6.5 software installation.



Step 6: The BMW Carsoft 6.5 program will be installed into your computer automatically..



Copyright © 2006 SZH Technology CO.,LTD

Step 8: In the hard-disk driver where you pasted the whole BMW Carsoft 6.5 software, please open the File folder of BMW Carsoft 6.5, then open the file holder of "crack", copy all 10 files in this holder,



Step 9: Then paste all those 10 new files into the file holder of "cm75f" at directory C:\cm75f\ (this directory was created during the BMW Carsoft 6.5 software installation automatically). The system will ask you if you want to replace old file during pasting those 10 new files into the file holder "cm75f", click "Yes all" button to replace all old files by those cracked 10 new files in "cm75f" file holder.

🚞 cm75f											- 7 🛛
文件(E) 编辑(E) 查看(V) 收藏(A) 工具	(1) 帮助(1)									
🕝 后退 🔹 🕥 🕤 💋	🦻 🎾 搜索 🌔	文件夹 🛄 🕶									
地址 @) 🚞 C:\cm75f										~	● 转到
文件和文件夹任务 ◆ ① 创建一个新文件夹 ◆ ● 行这个文件夹发布到 ● ● 共享此文件夹 ● ● 大学此文件夹 ● ● 本地磁金 C:) ● 我的文档 ● ● 我的文档 ● ● 列上邻居 ●	ABS1. D	ABS2. DXT	ABS3. DXT	AIRBAG1. DXT	AIRBAG2. DXT	AIRBAG3. DXT	AIRBAG4. DXT	AIRBAG5. DXT	BC4. DXT	BC5. DXT	
	BMS_FEH.	DXT BS65. CCC	CS V6.5 CARSOFT	CAS_FEH. DXT	CCONTROL	CVM_FEH. DXT	DDE2_FEH	DDE22_FE	DDE30_FE	DDE40_FE	
	DDE50_FE	DDE60_FE	DME11_FE	DME31_FE	DME33_FE	DME40_FE	DME41_FE	DME52_FE	DSC_FEH. DXT	DWA1. DXT	
	DWA3. D)	T DWA_FEH. DXT	EGS1_FEH	EGS3_FEH	EGS30_FE	EWS_FEH. DXT	HKL1. DXT	HKL2. DXT	HKL3. DXT	HKL4. DXT	
详细信息	× HKL5. D)	T IHKL_FEH	KI_FEH. DXT	KOMBI1. DXT	KOMBI2. DXT	KOMBI3. DXT	KOMBI_FE	LCCM_FEH	LM_FEH. DXT	ME9_FE. DXT	
	MET2_FEH	MID. DXT	MS45_FE. DXT	MSS52_FE	PDC_FEH. DXT	RLS_FEH. DXT	SBSL_FEH	SBSR_FEH	SFZ_FEH. DXT	SIM_FEH. DXT	
	ZGM_FE. I	IXT ZKE1. DXT	ZKE2. DXT	ZKE3. DXT	ZKE4. DXT	ZKES. DXT					
🍠 开始 🌔 🖻 BMW	Carsoft 6.5	🗀 cm75£		🕎 bmw 6.5 c	arsoft					🖮 🗘 🍫	% 15:50

Step 10: Then paste all those 10 new files into the file holder of "BMW" at directory C:\Program Flies\CARSOFT\BMW (this directory was created during the BMW Carsoft 6.5 software installation automatically). The system will ask you if you want to replace old file during pasting those 10 new files into the file holder "BMW", click "Yes all" button to replace all old files by those cracked 10 new files in "BMW" file holder.

😂 BEV											[- 7 🔀
文件(E) 编辑(E) 查看(V))收藏	(A) 工具(T)) 帮助(H)									
🔇 后退 🔹 🚫 🕤 🏂	<i>。</i>	索 🕞 文修	#夹 🛄▼									
地址 @) 🚞 C:\Program File	s\CARSOF	T\BMW									~	🔁 转到
文件和文件来任 条	۲	BCS. DXT	BMS_FEH. DXT	bmw	bmwhlp	CARSOFT6	CAS_FER. DXT	CCCHNG32	COMCAT. DLL	CTL3D32. DLL	CVM_FEH. DXT	~
 ⊘ 创建一个新文件夹 ● 裕这个文件夹发布到 Web ● 共享此文件夹 	č	DBMW01	DBMW02	DBMW03	DBMW04	DBMW05	DBMW06	DBMW07	DBMW08	DBMW09	DBMW10	
其它位置	۲	DBMW11	DBMW12	DBMW13	DBMW14	DBMW15	DBMW16	DDE2_FEH	DDE22_FE	DDE30_FE	DDE40_FE	
 CARSOFT 我的文档 共享文档 我的电脑 		DDE50_FE	DDE60_FE	DME11_FE	DME31_FE	DME33_FE	DME40_FE	DME41_FE	DME52_FE	DSC_FEH. DXT	DWA1. DXT	
9 网上邻居 详细信息	۲	DWA3. DXT	DWA_FEH. DXT	EGS1_FEH	EGS3_FEH	EGS30_FE	EWS_FEH. DXT	HKL1. DXT	HKL2. DXT	HKL3. DXT	HKL4. DXT	
		HKL5. DXT	IHKL_FEH	KI_FEH. DXT	KOMBI1. DXT	KOMBI2. DXT	KOMBI3. DXT	KOMBI_FE	LCCM_FEH	IM_FEH. DXT	ME9_FE. DXT	
		ME72_FEH	MFC42. DLL	MID. DXT	MS45_FE.1类修	 型: DXT 文件 改日期: 2005-	-2-15 19:17	MSS52_FE	MSVBVM50	3 MSVBVM60	MSVCRT. DLL	
		OLEAUT32	0LEPR032	PDC_FEH. DXT	RLS_FEH. DXT	小: 27.6 KB 2000 SBSL_FEH	SBSR_FEH	SFZ_FEH. DXT	sim. dxt	SIM_FEH. DXT	Uninst. i su	
		VB5STKIT	ZGM_FE. DXT	ZGM_FEH. DXT	ZKE1. DXT	ZKE2. DXT	ZKE3. DXT	ZKE4. DXT	ZKE5. DXT			*
💏 开始 🔰 🗁 BMW		6) cm75£	T	🕑 bmw 6.5 c	arsoft					👝 🖞 🔿	15:54

Step 11: Then you can run the BMW Carsoft 6.5 program now, click "Start" button at the left corner, select "Programs" menu, then select "CARSOFT" holder, click "BMW" to run the BMW Carsoft 6.5 program.



Step 12: Then you can see the BMW Carsoft Diagnostic program surface, click "BMW V6.5 WINDOWS" button to go ahead the BMW Carsoft 6.5 program.

Step 13: Then you can apply full functions of BMW Carsoft 6.5 Diagnostic program with the hardware together.

--- End ----